


Tap the red wire from the ABS fix into the wire going to pin A7 with a T tap

Tap the black wire from the ABS fix into the wire going to pin A6 with a T tap.

Cut the ABS wire located at cluster B3 a couple inches back from the green connector, strip both ends back and crimp on the ¼ male spade on to the car side and the ¼ female spade to the B3 wire going to the cluster.

Connect the car side male spade to the female spade on the Blue wire from the abs fix and the B3 wire to the cluster female spade to male spade on the gray wire from the ABS fix.

Once installed if your abs light is not working correctly flip the switch on the side of the abs fix to the other position. This should correct the issue.

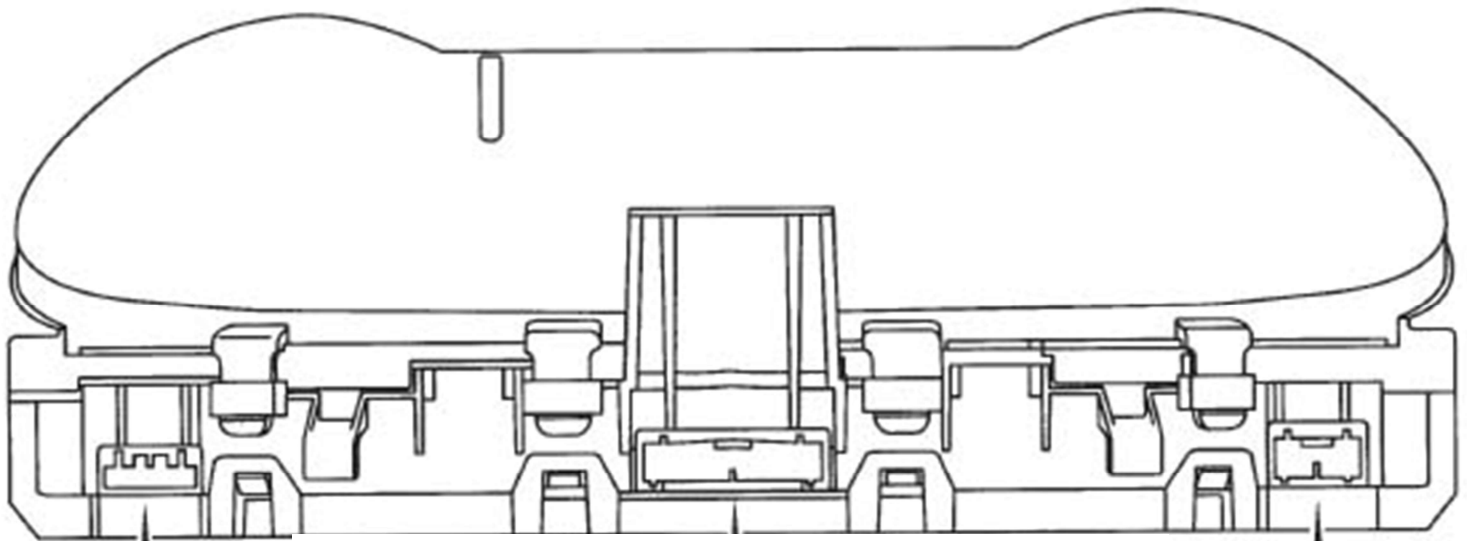

The connector labels A and C at the cluster are swapped and flipped on newer cars. Please use this diagram when trying to locate the correct wires.

